




(FIG 2)

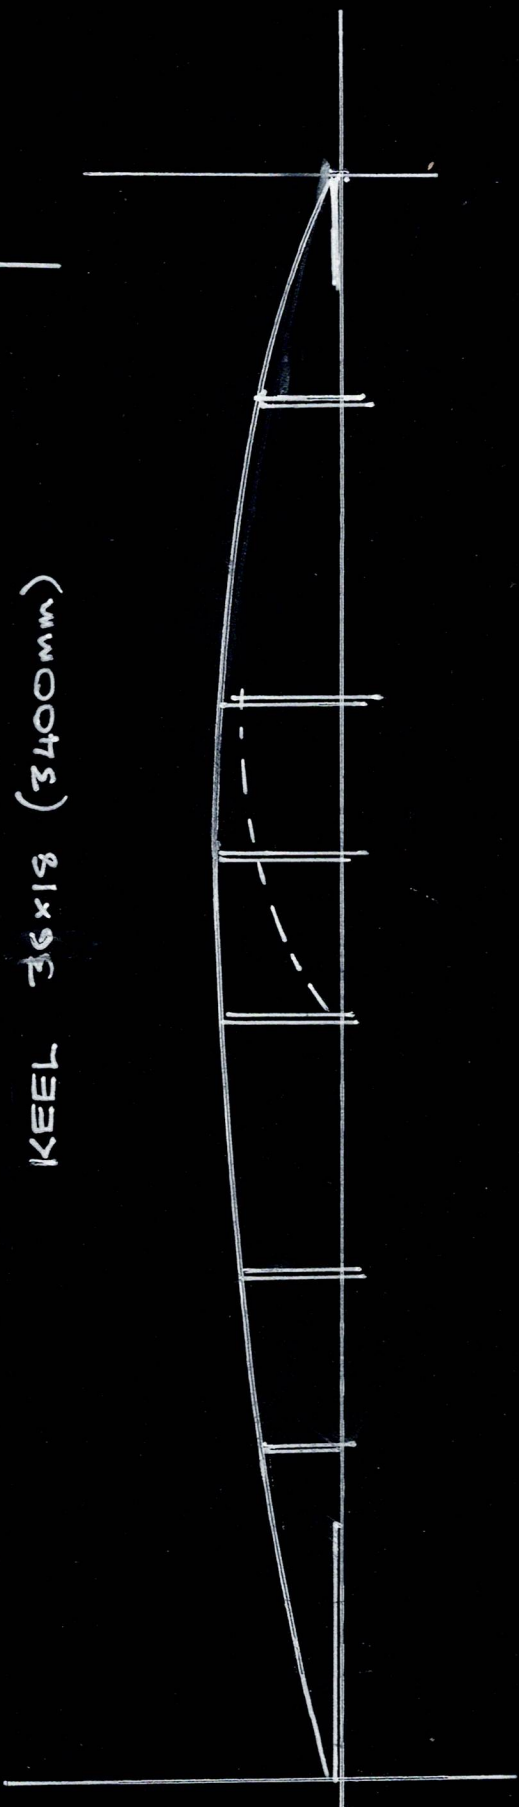


STAPLED

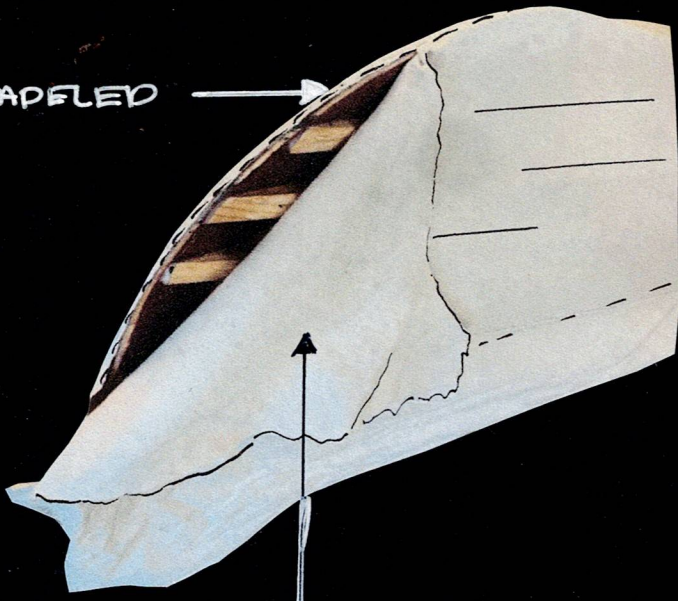

PULL BACK OVER AND STAPLE

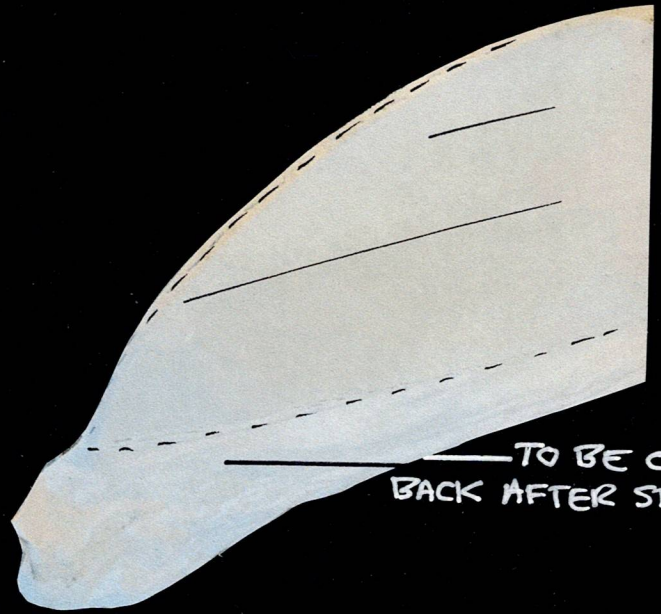

TO BE CUT BACK AFTER STAPLED

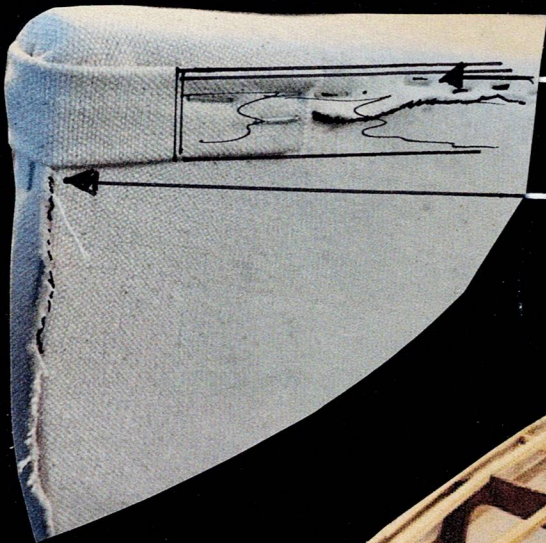


TO BE COVERED WITH GUNWALE TRIM

TO BE COVERED WITH BRASS TRIM

(FIG 5)




PUSH THE STAPLE GUN INTO THE CANVAS AND STAPLE CUT BACK AFTER

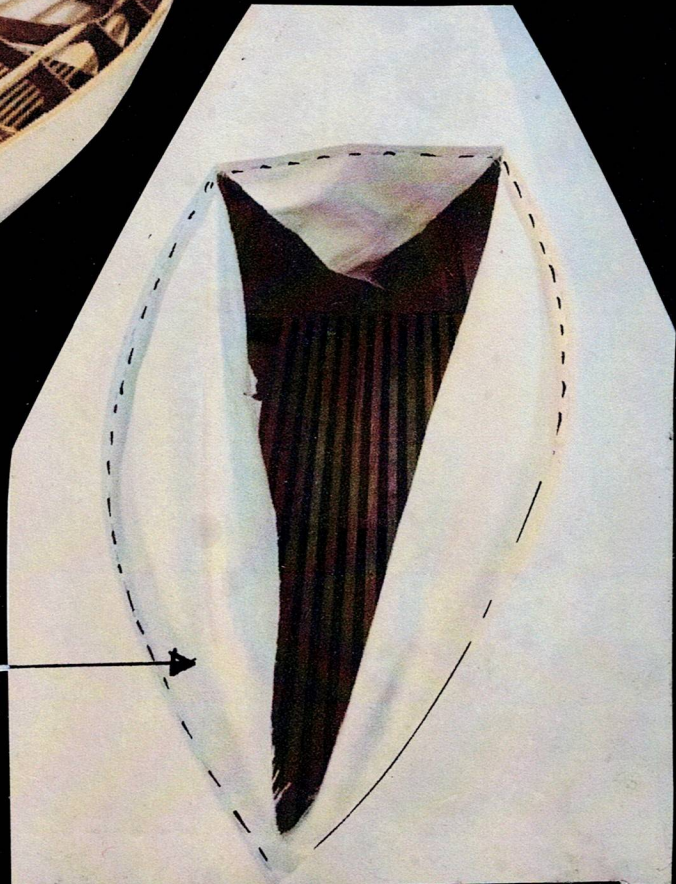

FORM AND FLOAT
DIY CLASSIC KAYAKS AND SMALLCRAFT

STERN

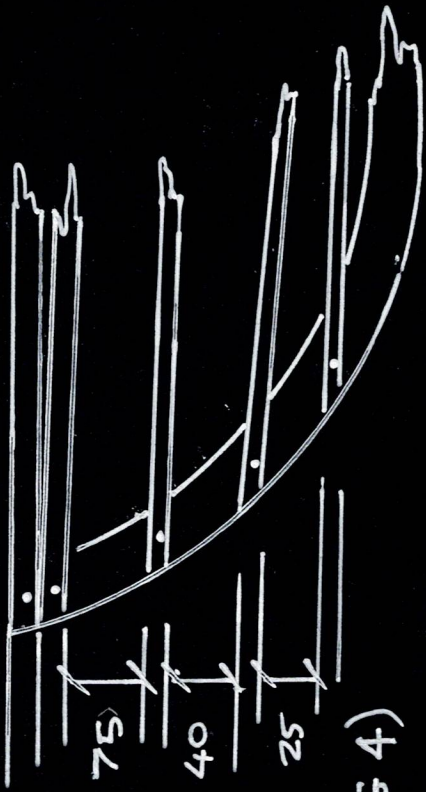


(FIG 4)

BOW




NB THESE NEED NOT BE MM PERFECT AS THEY FIND THEIR OWN NATURAL FORM.

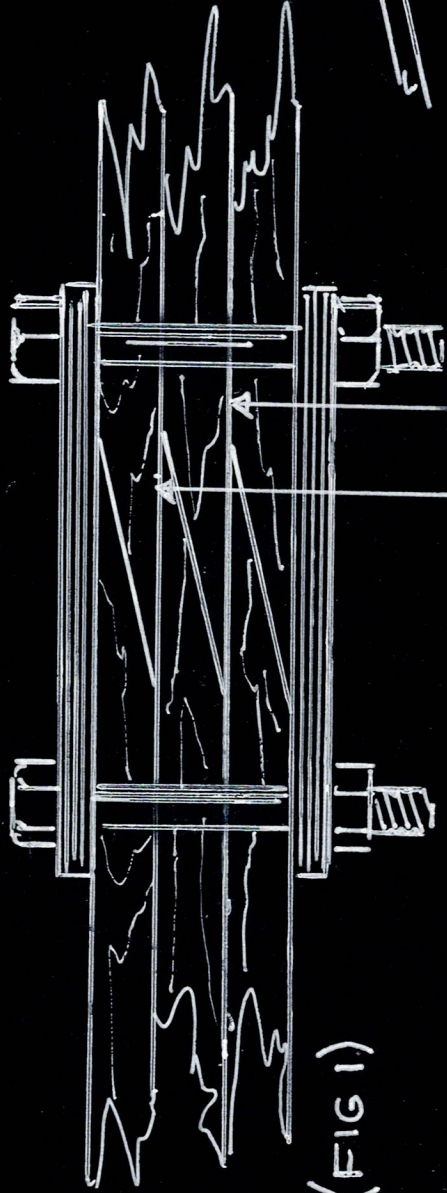

(FIG 1)

PUT MASKING TAPE BETWEEN STRINGERS
(DO NOT OVERTIGHTEN)

STRINGER JOINT USING VICE SUPPLIED

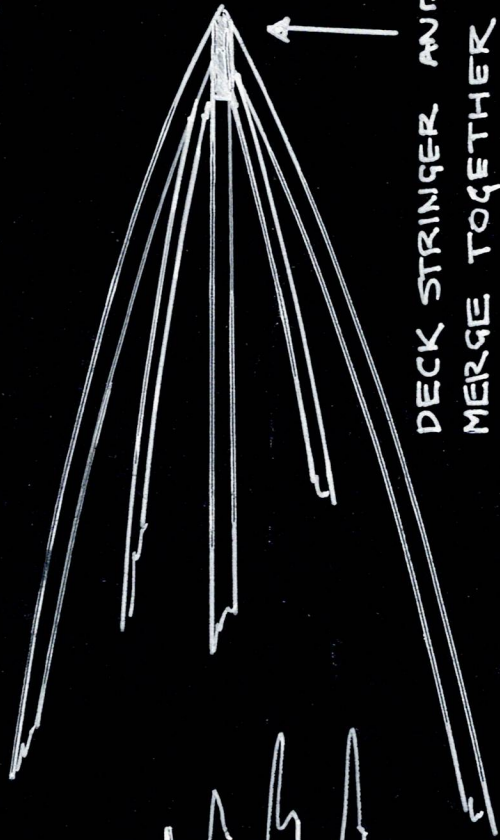

DECK STRINGER AND GUNWALE
MERGE TOGETHER

NOT TO SCALE



STRINGER ORDER

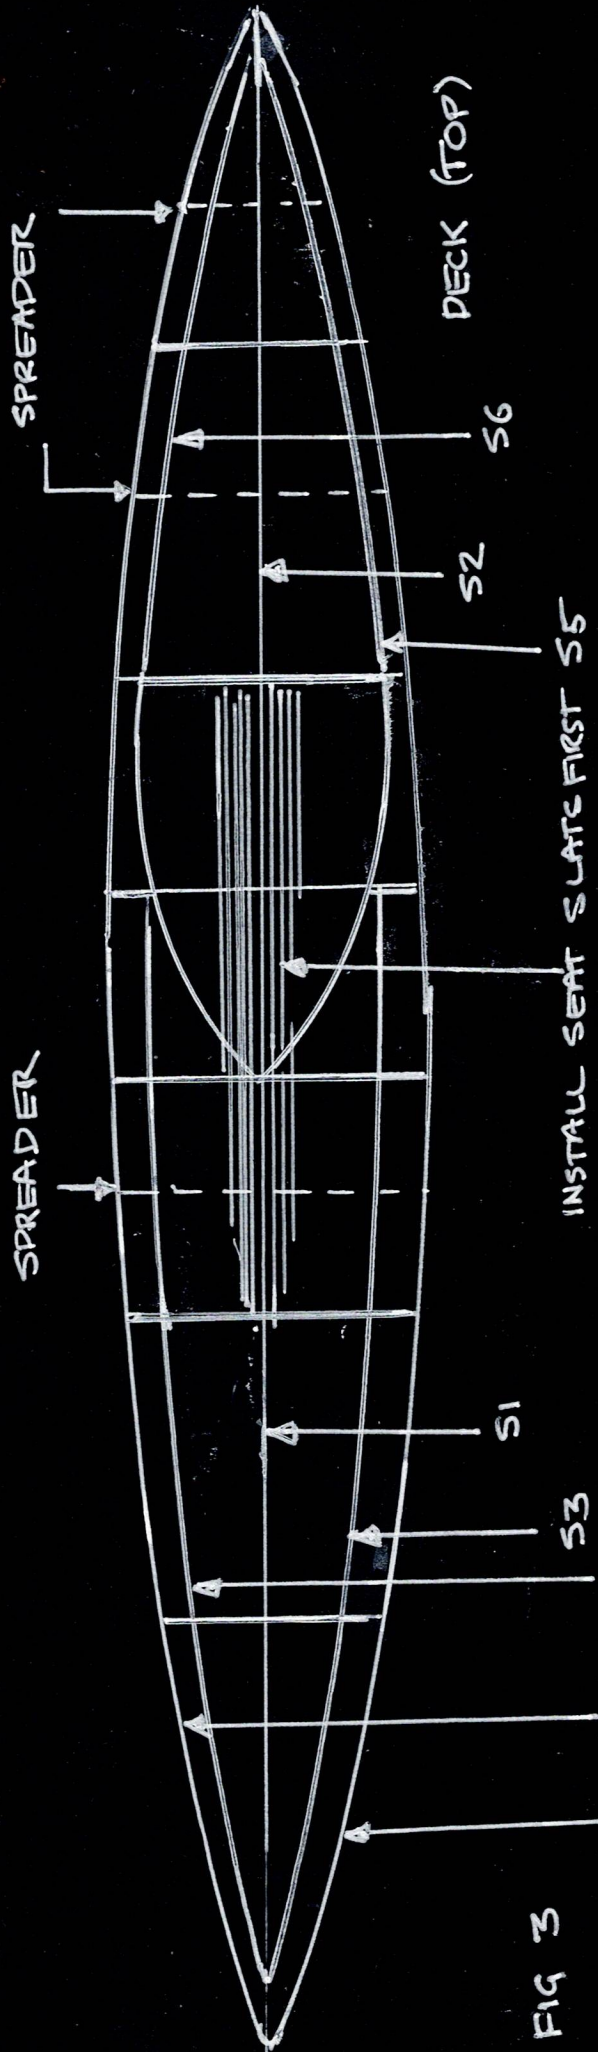


FIG 3

